


PROPOSED TOOLS FOR INSTALLATION :

- A** Manual tile cutter
- B** Glass cutter
- C** Large utility knife between tiles
- D** Grout float

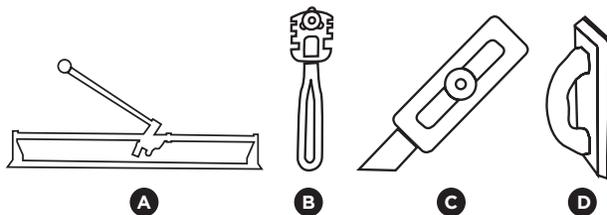

HOW TO INSTALL SPEEDTILES GLASS MOSAICS :

- 1** Please ensure that the wall where you are installing the SpeedTiles is **CLEAN** and **SMOOTH**.
- 2** **STICKING TIP: Use a 500 ml to 750 ml bottle filled with water and add 1 to 2 tea spoon(s) of mild dishwashing liquid.**
- 3** Then find the highest countertop point and draw a level line from that point. This line will serve as a guide to install the first row of tiles.
- 4** Place the tile (pre-cut if needed) with the glass side facing the countertop and remove the Inoxia protection paper. Spray a SMALL amount of soapy water mix on the adhesive and spread it with your hand over the whole surface. Adding soapy water will allow you to perfectly adjust the tile on the wall by delaying the bonding time.
- 5** Once the tiles are in place, use a grout float to press on the tiles to maximize the adhesion.
- 6** To obtain a professional finish, use a finishing silicone of the color of your choice.

HOW TO CUT THE GLASS

Use a non-permanent marker to draw a cutting line.

Stick masking tape along the cutting line. The masking tape must be placed on the piece of tile that will be installed.

Cut the surface following the drawn line, according to the instructions for the tool you will be using.


Sand the cut edge (120 grade sandpaper) to soften the edge.

BEFORE INSTALLING!

It is highly recommended to simulate the installation by placing the tiles flat and by ensuring the interlocking of the tiles.

PROPOSED TOOLS FOR INSTALLATION :

- A** Manual tile cutter
- B** Glass cutter
- C** Large utility knife between tiles
- D** Grout float

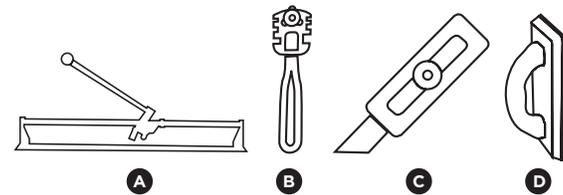

HOW TO INSTALL SPEEDTILES WHITE GLASS MOSAICS :

- 1** Please ensure that the wall where you are installing the SpeedTiles is CLEAN and SMOOTH.
- 2** **STICKING TIP: Use a 500 ml to 750 ml bottle filled with water and add 1 to 2 tea spoons(s) of mild dishwashing liquid.**
- 3** Then find the highest countertop point and draw a level line from that point. This line will serve as a guide to install the first row of tiles.
- 4** Measure and mark the center of the wall. Measure and mark the center of the first tile to be installed.
- 5** Remove the 3/8" adhesive strip at the bottom of the first tile to be installed, following the dotted cut-line.
- 6** Fold up the 3 remaining strips towards the back of the tile and then remove only the orange protective paper. Replace the adhesive strips in their initial position.
- 7** Place the tile with the glass side facing the counter and remove the Innoxia protective paper.
- 8** Spray a SMALL amount of soapy water mix on the adhesive and spread it with your hand over the whole surface. Adding soapy water will allow you to perfectly adjust the tile on the wall by delaying the bonding time.
- 9** Align the bottom side of the tile with the previously drawn line and make sure the two centering marks are aligned.
- 10** On the tile you have just stuck, you will notice that part of the adhesive is uncovered.
Before sticking the following tiles, do not forget to spray the adhesive with the soapy water mix.
 - For the tiles that will be installed towards the right, you will remove the adhesive strips on the left and the ones at the bottom. Keep the ones located to the right.** Do not forget to remove the orange protective paper that will always be there.*
 - When you work towards the left, the principle remains the same for the strips located at the bottom, and it is reversed for those located on the side.
- 11** In other words, you must ensure that the parts without adhesive are placed on the adhesive of the tiles already installed.
- 12** Once the tiles are in place, use a grout float to press on the tiles, or use a clean, perfectly smooth board and a rubber hammer to gently hit the whole surface.
- 13** To obtain a professional finish, use a finishing silicone of the color of your choice.

HOW TO CUT THE GLASS

- 1** Use a non-permanent marker to draw a cutting line.
- 2** Stick masking tape along the cutting line. The masking tape must be placed on the piece of tile that will be installed.
- 3** Cut the surface following the drawn line, according to the instructions for the tool you will be using.
- 4** Sand the cut edge (120 grade sandpaper) to soften the edge.

BEFORE INSTALLING!

It is highly recommended to simulate the installation by placing the tiles flat and by ensuring the interlocking of the tiles.