


PROPOSED TOOLS FOR INSTALLATION :

- A** Russian pliers
- B** Large utility knife to cut between the stones
- C** Rotary tool
- D** Wet tile saw with diamond blade
- E** Grout float

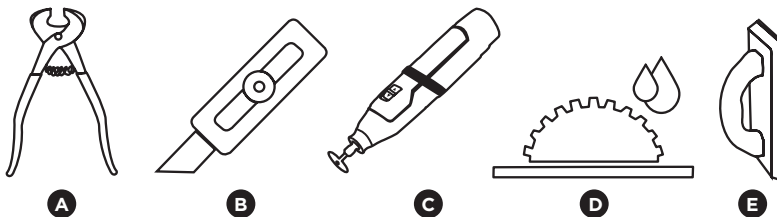

HOW TO INSTALL SPEEDTILES STONE MOSAICS:

- 1** Please ensure that the wall where you are installing the SpeedTiles is CLEAN and SMOOTH.
- 2** **STICKING TIP: Use a 500 ml to 750 ml bottle filled with water and add 1 to 2 tea spoon(s) of mild dishwashing liquid.**
- 3** Then find the highest countertop point and draw a level line from that point. This line will serve as a guide to install the first row of tiles.
- 4** Place the tile (pre-cut if needed) with the stone side facing the countertop and remove the Inoxia protection paper. Spray a SMALL amount of soapy water mix on the adhesive and spread it with your hand over the whole surface. Adding soapy water will allow you to perfectly adjust the tile on the wall by delaying the bonding time.
- 5** Once the tiles are in place, use a grout float to press on the tiles to maximize the adhesion.
- 6** To obtain a professional finish, use a finishing silicone of the color of your choice.

BEFORE INSTALLING!

Because the tiles are made of natural materials, it is highly recommended to simulate the installation by placing the tiles flat and by ensuring the interlocking of the tiles

IMPORTANT!

If you are using SpeedTiles made of natural stone in a place where they are likely to get dirty, we suggest to protect the surface with an appropriate sealant.